

A1160 - A1171 AE1160 - AE1171





Kalibrierung

- 1. Hebel des Gerätes betätigen, sodass der Niederhalter angehoben wird.
- 2. Bei geöffneten Klauen Kalibrierhilfe einlegen und andrücken, sodass die Klauen zuschnappen.
- 3. Niederhalter ablassen.
- 4. Uhr auf das Maß einstellen, das auf der Kalibrierhilfe eingraviert ist.
- 5. Nun wird die Kalibrierhilfe wieder entfernt und die eigentliche Messung kann beginnen.

Messung


- 1. Das Aerosolbehältnis wird genauso eingeführt wie vorher die Kalibrierhilfe.
- 2. Nach dem Ablassen des Niederhalters kann die Halsbzw. die Crimphöhe direkt abgelesen werden.



0688-97



A1160 - A1171 AE1160 - AE1171

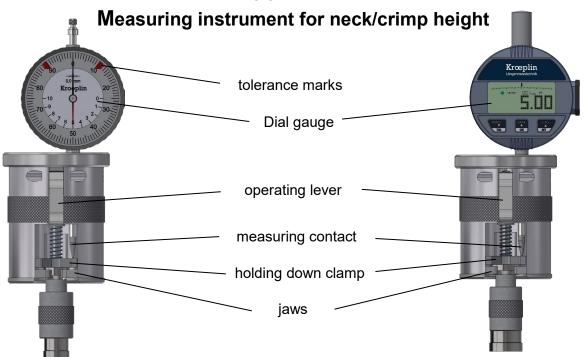



Calibration

- 1. For lift up the holding down clamp press the operating lever.
- 2. With the jaws open insert the calibration gauge.
- 3. Let off the holding down clamp.
- 4. Adjust the dial indicator according to the number which is graved on the calibration gauge.
- 5. Remove the calibration gauge and the measurement can start.

Measurement

- 1. Press in the aerosol receptacle in the same way as the calibration gauge.
- 2. Let off the holding down clamp and read the value of the crimp or neck height.



0688-97 Stand: 15.01.2024